


POCKETALK
SENTIO
QUICK START GUIDE



STEP 1


Insert the serial code and click **Authenticate**

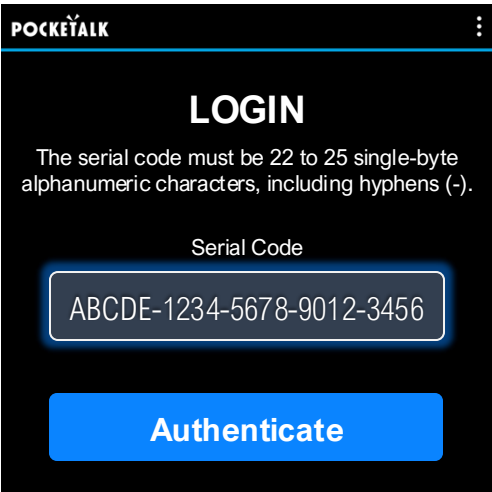

STEP 2


Choose how to interpret

- SITUATION **Face-to-face meetings**
- METHOD **Various microphone picks up the voice of around you and yourself**

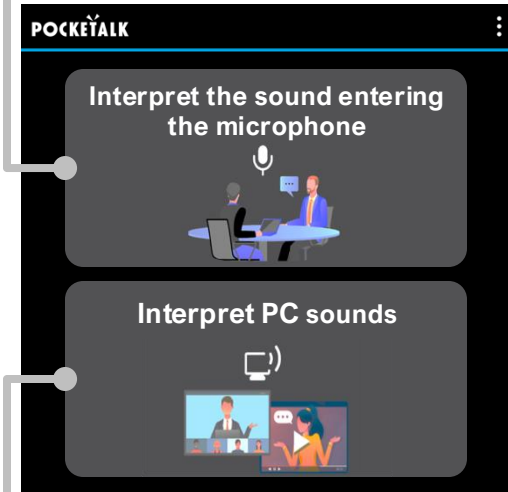


- SITUATION **Online meetings**
- METHOD **Direct input of digital sound in a PC**
- NOTES **Available PC only**

STEP 3

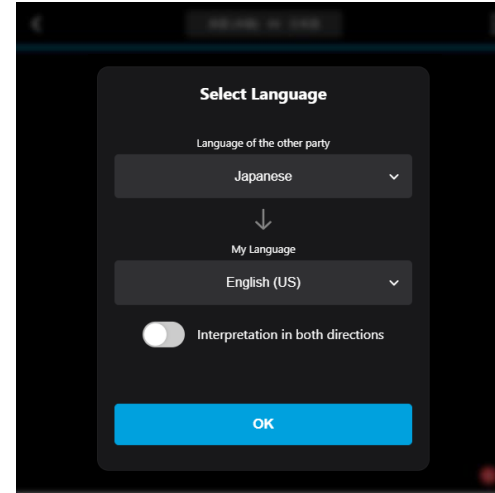

- 1. Allow microphone access**
An external microphone (i.e. condenser microphone / headset) is recommended rather than the built-in microphone.
- 2. Select the language to interpret**
Automatically recognizes the language being spoken and switches interpretation direction only when two of the following 10 languages are combined

English, Japanese, Korean, Chinese, Spanish, German, French, Italian, Portuguese, Russian

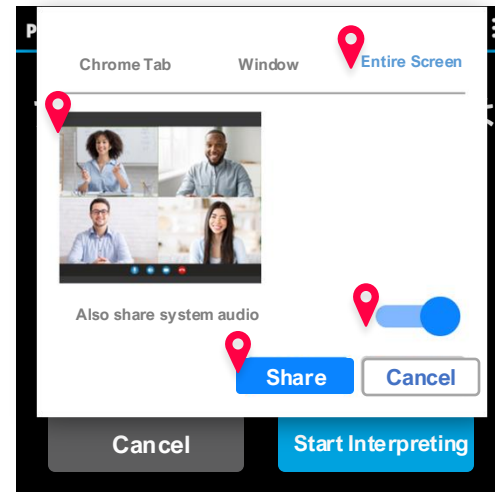


- 1. Click Start Interpreting**
A pop-up window will appear as shown on the left.
- 2. Click Entire Screen**
- 3. Click screen thumbnail**
- 3. Turn on Also share system audio***
- 4. Click Share**

* Means audio capture. Not screen sharing.

STEP 1


Insert the serial code and click **Authenticate**

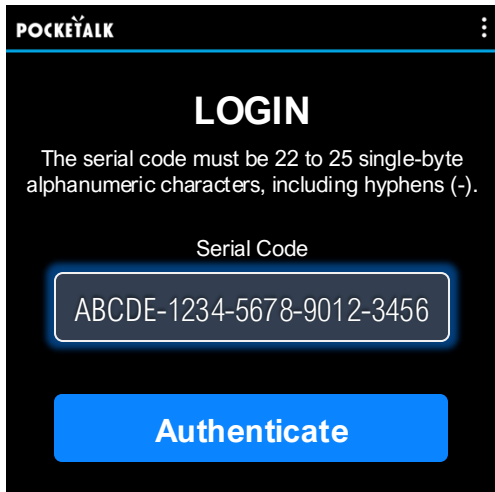

STEP 2


Choose how to interpret

- SITUATION **Face-to-face meetings**
- METHOD **Various microphone picks up the voice of around you and yourself**

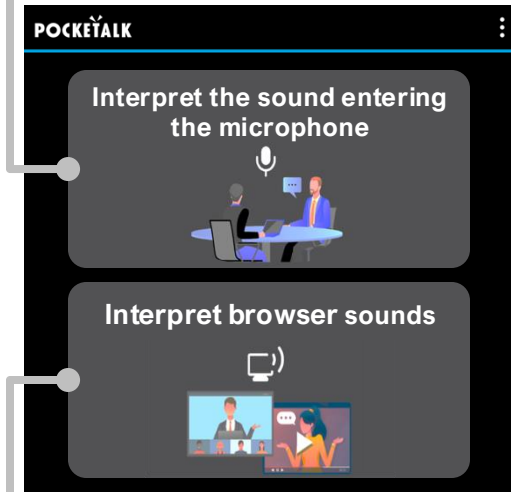


- SITUATION **Online meetings**
- METHOD **Direct input of digital sound on a browser Available PC only**
- NOTES

STEP 3

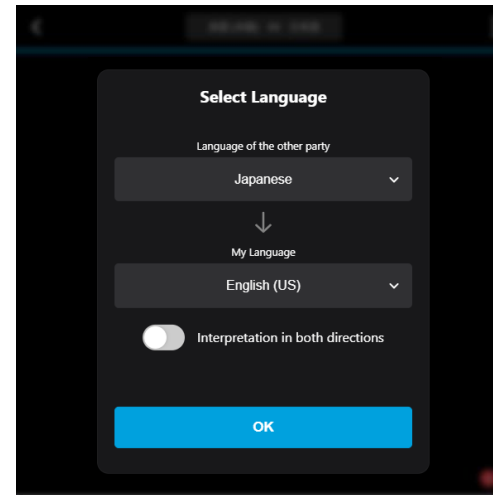

1. Allow microphone access
An external microphone (i.e. condenser microphone / headset) is recommended rather than the built-in microphone.
2. Select the language to interpret
Automatically recognizes the language being spoken and switches interpretation direction only when two of the following 10 languages are combined

English, Japanese, Korean, Chinese, Spanish, German, French, Italian, Portuguese, Russian

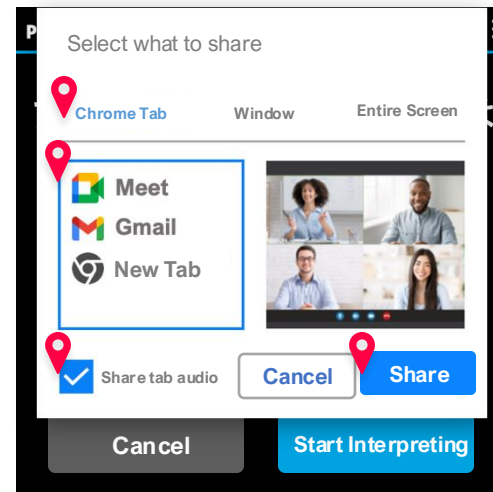

1. Click **Start Interpreting**
A pop-up window will appear as shown on the left.
2. Click **Chrome Tab**
3. Click **browser tab**
4. Tick on **Share tab audio***
5. Click **Share**

* Means audio capture. Not screen sharing.

Interpret Direction

1way / 2way

Go Back

Go back to STEP2

Input Language

Select one below.

1. Chinese Simplified
2. English (US)
3. French (France)
4. German
5. Italian
6. Japanese
7. Korean
8. Portuguese (Portugal)
9. Russian
10. Spanish (Spain)

Output Language

74 languages available.

Microphone

Appears only when using a PC.

⚠ Check your mic-settings if interpretation results do not appear.

Talk Button


Interpreter (microphone) ON/OFF switching

⚠ Turn off when interpretation is not needed. It will prevent auditory hallucinations (strange translation) caused by ambient and background noise.





Font size

Adjust the size of text to be displayed

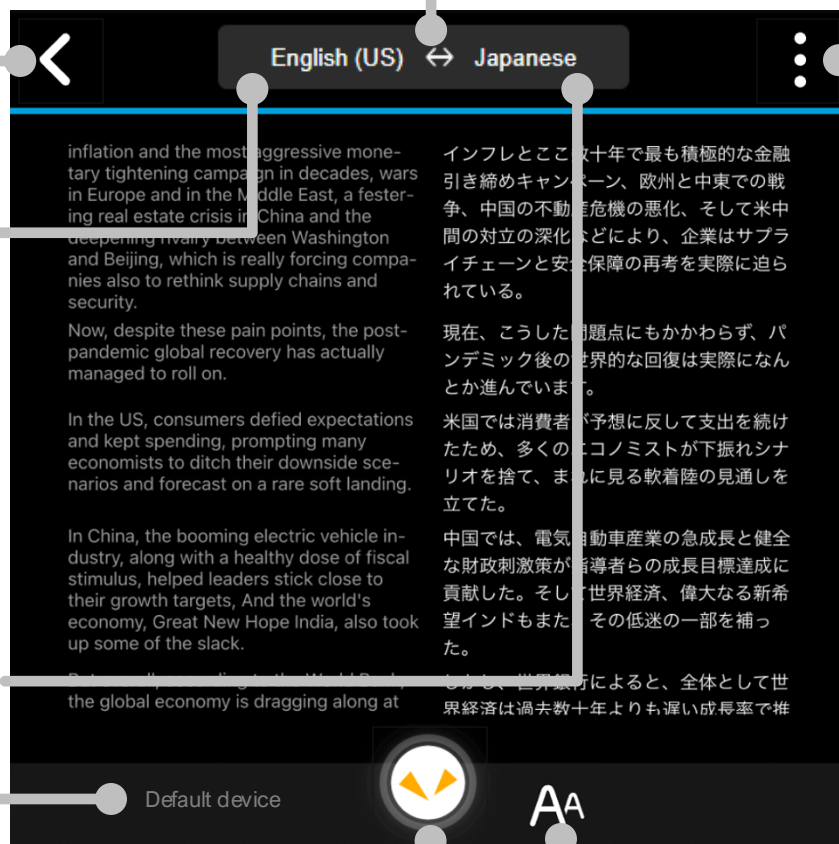


Menu

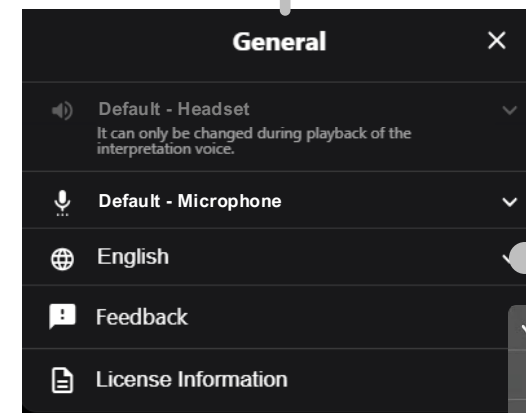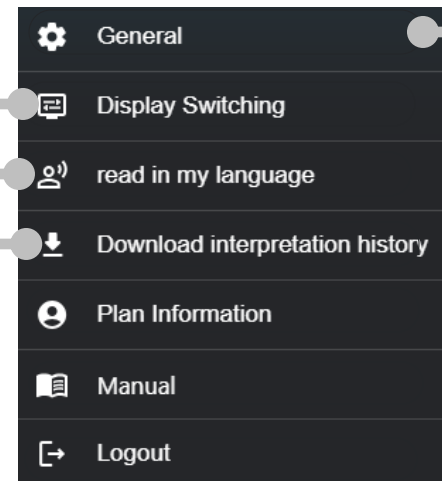

Interpreter History Settings

- The interpreter history is recorded when "Save interpretation history" is turned on (Default setting: OFF).
- Note that once you close SENTIO, you will not be able to restore the history.
- Clicking **Download interpretation history** before closing the browser will save the CSV file to the user's terminal only.

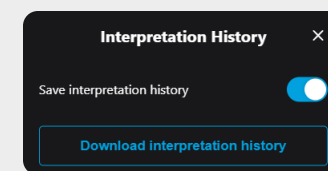

Toggle playback of interpretation voice (voice over)


- Default setting: OFF
- Note: Headset or earphones required

Display switching of the other party's language (Output Language)



Recommended Settings

Online Meeting (1:1 / 1:multi) * 1

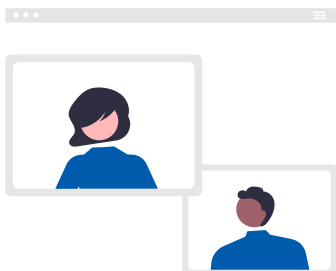

STEP2

Interpret PC / Browser sounds




Recommended Mic.

Condenser mic.

⚠ Highly sensitive and capable of capturing clear audio, especially effective when used with noise-canceling features.



Hybrid Meeting (1:multi / multi:multi) * 1

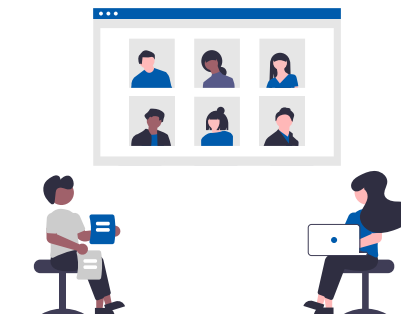

STEP2

Interpret PC / Browser sounds

⚠ Participants in the conference room should also join the online meeting.




Recommended Mic.


- Unidirectional mic.
- Headset

⚠ When guests are accessing the meeting from multiple rooms, each room should be equipped with a unidirectional mic.

⚠ If only a few guests are joining online, each should set up their own headset individually.

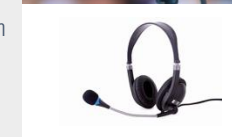

Webinar Viewing

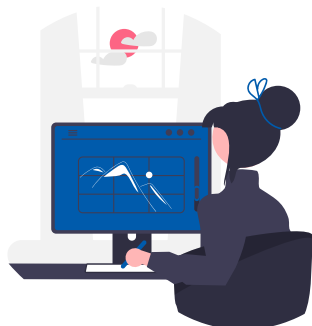

STEP2

Interpret PC / Browser sounds



Recommended Mic.

Not required

⚠ A microphone is not required for webinars (online files) or other video viewing only. However, it is preferable to have a clear sound source, since the accuracy of speech recognition by Pocketalk Sentio depends on the microphone (quality of sound collection) of the webinar host.

Offline Meeting (1:multi)*1



STEP2

Interpret the sound entering the microphone



Recommended Mic. Unidirectional mic.

⚠ When the speaker talks into the mic, surrounding & environmental noise in the meeting room is filtered out, capturing only the speaker's voice.



Offline Meeting / Interview (1:1)



STEP2

Interpret the sound entering the microphone



Recommended Mic.

- Unidirectional mic.
- Headset

⚠ A unidirectional microphone shall be used to pick up only what the speaker says (the voice in a specific direction).



Notes

*1

For multiple users, each user must have a Pocketalk Sentio subscription account.

*2

The accuracy of speech recognition depends not only on the microphone settings described in this guide, but also on the speaker's glibness and the surrounding environment. An omni-directional microphone (a microphone for meeting rooms that picks up sound in all directions) without noise cancellation is not suitable for this service, because it captures the entire sound of the meeting room, including the voice, noise, and even the slight sound.

